



Recommended Practice for

Fire Alarm System Job Practices

NEIS®



Published by
National Electrical
Contractors Association



An American National Standard

NECA 305–2001
Standard for
Fire Alarm System
Job Practices



Published by
**National Electrical
Contractors Association**



National Electrical Installation StandardsTM

© 2001 National Electrical Contractors Association

<This page intentionally left blank>

Table of Contents

Foreword	v
1. Scope	1
1.1 Fire Alarm System Overview	1
2. Definitions	3
3. Prepare for Installation	12
3.1 Receive, Inventory and Store Equipment	12
3.2 Documents	12
3.3 Tools	12
3.4 Job Supervision	12
3.5 Plan the Installation	12
3.6 Job Pacs	12
4. Install Fire Alarm Control Panel(s)	14
4.1 Code References	14
4.2 Installation Guidelines	14
4.3 Enclosure Installation	14
4.4 Cautions	15
5. Install System Wiring	16
5.1 Code References	16
5.2 Circuits with Special Requirements	16
5.3 Installation Guidelines	18
5.4 Cautions	19
6. Install Field Devices	20
6.1 Manual Fire Alarm Box	20
6.2 Area Smoke Detector (Spot-type)	21
6.3 Beam Smoke Detector	22
6.4 Duct Smoke Detector	23
6.5 Heat Detector	24
6.6 Waterflow Switch	25
6.7 Supervisory Switches	25
6.8 Audible Appliances (Bells, Horns, Chimes, Speakers)	26
6.9 Visible Appliances (Strobes)	26
6.10 DACT (Digital Alarm Communicator Transmitter)	26

7. Check System Wiring	.28
7.1 Wiring Test Guidelines	.28
7.2 Voltage	.28
7.3 Grounds	.28
7.4 Open Circuits	.28
7.5 Short Circuits	.29
8. Finish Control Panel Installation	.30
9. Check System Operation	.31
9.1 Notification of Testing	.31
9.2 Control Test Units	.31
9.3 Field Device Test Preparation	.32
9.4 Monitoring for Integrity Tests (often referred to as Circuit Supervision)	.32
9.5 Device Tests	.32
9.6 Finalize Job	.35
10. Inspect, Test and Maintain	.36
10.1 Code References	.36
10.2 General Procedures	.36
10.3 Qualifications of Service Personnel	.36
10.4 Inspection	.36
10.5 Testing	.36
10.6 Maintenance	.36
10.7 Records (Inspection, Testing, Maintenance)	.36
10.8 Cautions	.37
Appendix A: Reference Standards	.38

(This foreword is not a part of the standard)

Foreword

National Electrical Installation Standards™ are designed to improve communication among specifiers, purchasers, and suppliers of electrical construction services. They define a minimum baseline of quality and workmanship for installing electrical products and systems. *NEIS*™ are intended to be referenced in contract documents for electrical construction projects. The following language is recommended:

Fire alarm systems shall be installed, tested and maintained in accordance with the requirements of NECA 305-2001, *Standard for Fire Alarm System Job Practices* (ANSI).

Use of *NEIS*™ is voluntary, and the National Electrical Contractors Association assumes no obligation or liability to users of this publication. Existence of a standard shall not preclude any member or non-member of NECA from specifying or using alternate construction methods permitted by applicable regulations.

Everything in this publication is intended to comply with the editions of the National Fire Alarm Code® and the National Electrical Code® (NEC) in effect at the time of publication. *NEIS*™ are not intended to duplicate the safety requirements of these codes or to establish regulatory requirements for electrical con-

struction. It is the responsibility of users of this standard to comply with state and local electrical codes when installing electrical products and systems.

Suggestions for revisions and improvements to this standard are welcome. They should be addressed to:

NECA Codes and Standards
3 Bethesda Metro Center Suite 1100
Bethesda, MD 20814
(301) 215-4521 telephone
(301) 215-4500 fax
brooke@necanet.org

To purchase *National Electrical Installation Standards*™, contact the NECA Order Desk at (301) 215-4504 tel, (301) 215-4500 fax, or orderdesk@necanet.org.

Copyright© 2001, National Electrical Contractors Association. All rights reserved. Unauthorized reproduction prohibited.

National Electrical Installation Standards and *NEIS* are trademarks of the National Electrical Contractors Association. National Fire Alarm Code, National Electrical Code and NEC are registered trademarks of the National Fire Protection Association, Quincy, Massachusetts.

Cover image courtesy of Simplex Grinnell.

<This page intentionally left blank>

1. Scope

This standard describes fire alarm system job practices for installing, testing, and maintaining fire alarm systems. These job practices represent a minimum level of quality for fire alarm system installations. This standard is intended to define what is meant by installing equipment in a “neat and workmanlike manner” as required by the National Electrical Code, Article 760.

All information in this publication is intended to comply with the following standards. Installers should always follow the National Fire Alarm Code, NFPA 72; the National Electric Code (NEC), NFPA 70; applicable state and local codes; and manufacturers’ instructions when installing fire alarm equipment and systems.

1.1 Fire Alarm System Overview

The NFPA definition of a fire alarm system is: “A system or portion of a system consisting of components and circuits arranged to monitor and annunciate the status of fire alarm or supervisory signal initiating devices and to initiate appropriate response to those signals.” In order to meet the intent of the definition, all fire alarm system installations must conform to National Fire Alarm Code, NFPA 72 requirements. All system components must be listed for use in a fire alarm system. Additionally, the system must meet local codes and be approved by the authority having jurisdiction(s).

Simply put, a fire alarm system detects fire conditions, notifies building occupants and emergency response personnel, and provides control functions (elevators, fans, dampers, etc.). However, there is a major difference between fire alarm systems and most other electrical systems.

A fire alarm system monitors field wiring and key system components for operational readiness. In a typical electrical system, a broken wire goes unnoticed until a switch is turned on or a thermostat calls for heat or cooling. The fire alarm system monitors for broken wires, shorted wires, grounded wires, and failure of key components. Each of these faults generates a visible and audible trouble signal. The required fire alarm system functionality makes proper installation of the field wiring critical to the successful completion and operation of the system.

Fire alarm systems interconnect with other systems for the purpose of providing control signals during a fire emergency. It is sometimes difficult to determine where the fire alarm system stops and other systems start. If a fire alarm system powers the “other system,” the “other system” is part of the fire alarm system. Example: A fire alarm system can power a smoke control system making it part of the fire alarm system. Or, a fire alarm system can provide signals (e.g., relay contacts) to a separately listed smoke control system, which is not part of the fire alarm system. The following paragraph from the NEC provides guidance.

“760-1. Scope

This article covers the installation of wiring and equipment of fire alarm systems including all circuits controlled and powered by the fire alarm system.

FPN No. 1: Fire alarm systems include fire detection and alarm notification, guard’s tour, sprinkler water-flow, and sprinkler supervisory systems. Circuits controlled and powered by the fire alarm system include circuits for the control of building systems safety functions, elevator capture, elevator shutdown, door release, smoke doors and damper control, fire doors and damper control and fan shutdown, but only where these circuits are powered by and controlled by the fire

alarm system. For further information on the installation and monitoring for integrity requirements for fire alarm systems, refer to the National Fire Alarm Code®, NFPA 72-1996.”

Reference Table 1 shows the Chapter assignments for the 1999 NFPA 72 vs. the 1993 and 1996 editions.

Reference Table 1: Fire Alarm Chapter Assignments, 1999 NFPA vs. 1993 & 1994 NFPA

Chapter Name	1999	1993 & 1996
Fundamentals of Fire Alarm Systems	1	1
Initiating Devices	2	5
Protected Premises Fire Alarm Systems	3	3
Notification appliances for Fire Alarm Systems	4	6
Supervising Station Fire Alarm Systems	5	4
Public Fire Reporting Systems	6	N/A (See NFPA 1221)
Inspection, Testing, and Maintenance	7	7
Fire Warning Equipment for Dwelling Units	8	2
Referenced Publications	9	8
Explanatory Material	Appendix A	Appendix A
Engineering Guide for Automatic Fire Detector Spacing	Appendix B	Appendix B
Referenced Publications	Appendix C	Appendix C
Index	Index	Index
Cross-Reference to Chapter 3	1999 only	N/A

2. Definitions

Acknowledge	To confirm that a message or signal has been received, such as by the pressing of a button or the selection of a software command.		within a given time period after being reset, in order to be accepted as a valid alarm initiation signal.
Addressable Device	A fire alarm system component with discrete identification that can have its status individually identified or that is used to individually control other functions.	Annunciator	A unit containing one or more indicator lamps, alphanumeric displays, or other equivalent means in which each indication provides status information about a circuit, condition, or location.
Air Sampling-Type Detector	A detector that consists of a piping or tubing distribution network that runs from the detector to the area(s) to be protected. An aspiration fan in the detector housing draws air from the protected area back to the detector through air sampling ports, piping, or tubing. At the detector, the air is analyzed for fire products.	Auxiliary Fire Alarm System	A system connected to a municipal fire alarm system for transmitting an alarm of fire to the public fire service communications center. Fire alarms from an auxiliary fire alarm system are received at the public fire service communications center on the same equipment and by the same methods as alarms transmitted manually from municipal fire alarm boxes located on streets.
Alarm	A warning of fire danger.		
Alarm Signal	A signal indicating an emergency that requires immediate action, such as a signal indicative of fire.	Average Ambient Sound Level	The root mean square, A-weighted, sound pressure level measured over a 24-hour period.
Alarm Verification Feature	A feature of automatic fire detection and alarm systems to reduce unwanted alarms wherein smoke detectors report alarm conditions for a minimum period of time, or confirm alarm conditions	Central Station Fire Alarm System	A system or group of systems in which the operations of circuits and devices are transmitted automatically to, recorded in, maintained by, and supervised from a listed central station that has competent and

	experienced servers and operators who, upon receipt of a signal, take such action as required by NFPA 72. Such service is to be controlled and operated by a person, firm, or corporation whose business is the furnishing, maintaining, or monitoring of supervised fire alarm systems.	Code	A standard that is an extensive compilation of provisions covering broad subject matter or that is suitable for adoption into law independently of other codes and standards.
Certification	A systematic program that uses randomly selected follow-up inspections of the certified systems installed under the program that allows the listing organization to verify that a fire alarm system complies with all the requirements of NFPA 72. A system installed under such a program is identified by the issuance of a certificate and is designated as a certificated system.	Coded	An audible or visible signal that conveys several discrete bits or units of information. Notification signal examples are numbered strokes of an impact-type appliance and numbered flashes of a visible appliance.
		Combination System	A fire alarm system in which components are used, in whole or in part, in common with a non-fire signaling system.
		Compatability Listed	A specific listing process that applies only to two-wire devices, such as smoke detectors, that are designed to operate with certain control equipment.
Circuit Integrity (CI) Cable	A 2-hour fire-rated cable used in fire alarm systems to ensure continued operation of critical circuits under fire conditions.	Control Unit	A system component that monitors inputs and controls outputs through various types of circuits.
Circuit Interface	A circuit component that interfaces initiating devices or control circuits, or both; notification appliances or circuits, or both; system control outputs; and other signaling line circuits to a signaling line circuit.	Digital Alarm Communicator Transmitter (DACT)	A system component at the protected premises to which initiating devices or groups of devices (zones) are connected. The DACT seizes the connected telephone line, dials a preselected number to connect to a DACR (Digital Alarm Communicator Receiver), and transmits signals indicating a status change of the initiating device.
Class A Circuit	A circuit capable of transmitting an alarm signal during a single open or a non-simultaneous single ground fault.		
Class B Circuit	A two wire circuit that permits system operation up to the point of an open circuit.	Dwelling Unit	One or more rooms for the permanent use of one or more

	persons as a space for eating, living, and sleeping, with permanent provisions for cooking and sanitation. For the purposes of this code, dwelling unit includes one- and two-family attached and detached dwellings, apartments, and condominiums but does not include hotel and motel rooms and guest suites, dormitories, or sleeping rooms in nursing homes.			detection devices and to a transponder(s) or off-premises transmitter(s). The control unit might also provide transfer of power to the notification appliances and transfer of condition to relays or devices connected to the control unit. The fire alarm control unit can be a local fire alarm control unit or a master control unit.
Emergency Voice/Alarm Communications	Dedicated manual or automatic facilities for originating and distributing voice instructions, as well as alert and evacuation signals pertaining to a fire emergency, to the occupants of a building.	Fire Alarm/Evacuation Signal Tone Generator		A device that produces a fire alarm/evacuation tone upon command.
End of Line Device	A device such as a resistor or diode placed at the end of a Class B circuit, permitting the circuit to be monitored for integrity (electrically supervised).	Fire Alarm System		A system or portion of a combination system that consists of components and circuits arranged to monitor and annunciate the status of fire alarm or supervisory signal-initiating devices and to initiate the appropriate response to those signals.
End of Line Relay	A device used to monitor the presence of power, typically used on four-wire smoke detector circuits.	Fire Command Center		The principal attended or unattended location where the status of the detection, alarm communications, and control systems is displayed and from which the system(s) can be manually controlled.
Evacuation Signal	Distinctive signal intended to be recognized by the occupants as requiring evacuation of the building.	Fire Safety Function Control Device		The fire alarm system component that directly interfaces with the control system that controls the fire safety function.
Fire Alarm Control Panel (FACP)	See <i>Fire Alarm Control Unit</i> . FACP sometimes appears in manufacturers literature.	Fixed-Temperature Detector		A device that responds when its operating element becomes heated to a predetermined level.
Fire Alarm Control Unit (FACU)	A system component that receives inputs from automatic and manual fire alarm devices and might supply power to	Four-Wire Smoke Detector		A smoke detector, which initiates an alarm condition on an

	IDC (Initiating Device Circuit) and is powered by a separate power supply circuit.	Ionization Smoke Detection	The principle of using a small amount of radioactive material to ionize the air between two differentially charged electrodes to sense the presence of smoke particles. Smoke particles entering the ionization chamber decrease the conductance of the air by reducing ion mobility. The reduced conductance signal is processed and used to convey an alarm condition when it meets preset criteria.
Gateway	A device that is used in the transmission of serial data (digital or analog) from the fire alarm control unit to other building system control units, equipment, or networks and/or from other building system control units to the fire alarm control unit.		
Heat Detector	A fire detector that detects either abnormally high temperature or rate of temperature rise, or both.	Life Safety Network	A type of combination system that transmits fire safety control data through gateways to other building system control units.
Household Fire Alarm System	A system of devices that produces an alarm signal in the household for the purpose of notifying the occupants of the presence of a fire so that they will evacuate the premises.	Line-Type Detector	A device in which detection is continuous along a path. Typical examples are rate-of-rise pneumatic tubing detectors, projected beam smoke detectors, and heat-sensitive cable.
Initiating Device	A system component that originates transmission of a change-of-state condition, such as in a smoke detector, manual fire alarm box, or supervisory switch.	Maintenance	Repair service, including periodic inspections and tests, required to keep the fire alarm system and its component parts in an operative condition at all times, and the replacement of the system or its components when they become undependable or inoperable for any reason.
IDC (Initiating Device Circuit)	A circuit to which automatic or manual initiating devices are connected where the signal received does not identify the individual device operated.	Manual Fire Alarm Station (Box)	A manually operated device used to initiate an alarm signal.
Intermediate Fire Alarm or Fire Supervisory Control Unit	A control unit used to provide area fire alarm or area fire supervisory service that, where connected to the proprietary fire alarm system, becomes a part of that system.	Multiple Station Alarm	A single station alarm capable of being interconnected to one or more additional alarms so that the actuation of one causes the appropriate alarm signal to operate in all interconnected alarms.

Multiple Station Alarm Device	Two or more single station alarm devices that can be interconnected so that actuation of one causes all integral or separate audible alarms to operate; or one single station alarm device having connections to other detectors or to a manual fire alarm box.		that provides audible, tactile, or visible outputs, or any combination thereof.
Municipal Fire Alarm System	A system of alarm-initiating devices, receiving equipment, and connecting circuits (other than a public telephone network) used to transmit alarms from street locations to the public fire service communications center.	NAC (Notification Appliance Circuit)	A circuit or path directly connected to a notification appliance(s).
Noncoded Signal	An audible or visible signal conveying one discrete bit of information.	Nuisance Alarm	Any alarm caused by mechanical failure, malfunction, improper installation, or lack of proper maintenance, or any alarm activated by a cause that cannot be determined.
Non-power-Limited Fire Alarm Circuit (NPLFA)	A fire alarm circuit powered by a source not more than 600 volts and unlimited current capacity with overcurrent protection provided at the point of connection to the power source. [See NEC, Sections 760-21 and 760-23.]	Operating Mode, Private	Audible or visible signaling only to those persons directly concerned with the implementation and direction of emergency action initiation and procedure in the area protected by the fire alarm system.
Nonrequired System	A supplementary fire alarm system component or group of components that is installed at the option of the owner, and is not installed due to a building or fire code requirement.	Operating Mode, Public	Audible or visible signaling to occupants or inhabitants of the area protected by the fire alarm system.
Nonrestorable Initiating Device	A device in which the sensing element is designed to be destroyed in the process of operation.	Operating System Software	The basic operating system software that can be altered only by the equipment manufacturer or its authorized representative. Operating system software is sometimes referred to as firmware, BIOS, or executive program.
Notification Appliance	A fire alarm system component such as a bell, horn, speaker, light, or text display	Permanent Visible Record (Recording)	An immediately readable, not easily alterable, print, slash, or punch record of all occurrences of status change.
		Photoelectric Light Obscuration Smoke Detection	The principle of using a light source and a photosensitive sensor onto which the principal portion of the source emissions is focused. When smoke

	particles enter the light path, some of the light is scattered and some is absorbed, thereby reducing the light reaching the receiving sensor. The light reduction signal is processed and used to convey an alarm condition when it meets preset criteria.		
Photoelectric Light-Scattering Smoke Detection	The principle of using a light source and a photosensitive sensor arranged so that the rays from the light source do not normally fall onto the photosensitive sensor. When smoke particles enter the light path, some of the light is scattered by reflection and refraction onto the sensor. The light signal is processed and used to convey an alarm condition when it meets preset criteria.	Primary Battery (Dry Cell)	A nonrechargeable battery requiring periodic replacement.
		Prime Contractor	The one company contractually responsible for providing central station services to a subscriber as required by NFPA 72. The prime contractor can be either a listed central station or a listed fire alarm service-local company.
		Projected Beam-Type Detector	A type of photoelectric light obscuration smoke detector wherein the beam spans the protected area.
Placarded	A means to signify that the fire alarm system of a particular facility is receiving central station service in accordance with NFPA 72 by a listed central station or listed fire alarm service-local company that is part of a systematic follow-up program under the control of an independent third party listing organization.	Proprietary Supervising Station Fire Alarm System	An installation of fire alarm systems that serves contiguous and noncontiguous properties, under one ownership, from a proprietary supervising station located at the protected property, at which trained, competent personnel are in constant attendance. This includes the proprietary supervising station; power supplies; signal-initiating devices; initiating device circuits; signal notification appliances; equipment for the automatic, permanent visual recording of signals; and equipment for initiating the operation of emergency building control services.
Positive Alarm Sequence	An automatic sequence that results in an alarm signal, even when manually delayed for investigation, unless the system is reset.		
Power-Limited Fire Alarm Circuit (PLFA)	A fire alarm circuit powered by a source that is listed and marked as follows: a listed PLFA or Class 3 transformer; a listed PLFA or Class 3 power	Protected Premises (Local) Fire Alarm System	A protected premises system that sounds an alarm at the protected premises as the

	result of the manual operation of a fire alarm box or the operation of protection equipment or systems, such as water flowing in a sprinkler system, the discharge of carbon dioxide, the detection of smoke, or the detection of heat.		
Public Fire Alarm Reporting System	A system of fire alarm initiating devices, receiving equipment, and connecting circuits used to transmit alarms from street locations to the communications center.	Relocation	The movement of occupants from a fire zone to a safe area within the same building.
Radiant Energy-Sensing Fire Detector	A device that detects radiant energy (such as ultraviolet, visible, or infrared) that is emitted as a product of combustion reaction and obeys the laws of optics.	Remote Supervising Station Fire Alarm System	A system installed in accordance with NFPA 72 to transmit alarm, supervisory, and trouble signals from one or more protected premises to a remote location where appropriate action is taken.
Rate Compensation Detector	A device that responds when the temperature of the air surrounding the device reaches a predetermined level, regardless of the rate of temperature rise.	Reset	A control function that attempts to return a system or device to its normal, non-alarm state.
Rate-of-Rise Detector	A device that responds when the temperature rises at a rate exceeding a predetermined value.	Restorable Initiating Device	A device in which the sensing element is not ordinarily destroyed in the process of operation, whose restoration can be manual or automatic.
Record Drawings	Drawings (as-built) that document the location of all devices, appliances, wiring sequences, wiring methods, and connections of the components of the fire alarm system as installed.	Shall	Indicates a mandatory requirement.
Record of Completion	A document that acknowledges the features of installation, operation (performance), service, and equipment with representation by the property	Should	Indicates a recommendation or that which is advised but not required.
		Signaling Line Circuit	A circuit or path between any combination of circuit interfaces, control units, or transmitters over which multiple system input signals or output signals, or both, are carried.
		Signaling Line Circuit Interface	A system component that connects a signaling line circuit to any combination of initiating devices, initiating device circuits, notification

	appliances, notification appliance circuits, system control outputs, and other signaling line circuits.	Spot-Type Detector	A device in which the detecting element is concentrated at a particular location. Typical examples are bimetallic detectors, fusible alloy detectors, certain pneumatic rate-of-rise detectors, certain smoke detectors, and thermoelectric detectors.
Single Dwelling Unit	A building consisting solely of one dwelling unit. (See <i>Dwelling Unit</i> .)		
Single Station Alarm	A detector comprising an assembly that incorporates a sensor, control components, and an alarm notification appliance in one unit operated from a power source either located in the unit or obtained at the point of installation.	Supervisory Signal	A signal indicating the need for action in connection with the supervision of guard tours, the fire suppression systems or equipment, or the maintenance features of related systems.
Site-Specific Software	Software that defines the specific operation and configuration of a particular system. Typically, it defines the type and quantity of hardware modules, customized labels, and specific operating features of a system.	Supervisory Signal Initiating Device	An initiating device such as a valve supervisory switch, water level indicator, or low air pressure switch on a dry-pipe sprinkler system in which the change of state signals an off-normal condition and its restoration to normal of a fire protection or life safety system; or a need for action in connection with guard tours, fire suppression systems or equipment, or maintenance features of related systems.
Sloping Ceiling	A ceiling that has a slope of more than 1 in 8.		
Smoke Alarm	A single or multiple station alarm responsive to smoke.		
Smoke Detector	A device that detects visible or invisible particles of combustion.	Supplementary	As used in NFPA 72, supplementary refers to equipment or operations not required by NFPA 72 and designated as such by the authority having jurisdiction.
Smooth Ceiling	A ceiling surface uninterrupted by continuous projections, such as solid joists, beams, or ducts, extending more than 4 in. (100 mm) below the ceiling surface.	Tactile Notification Appliance	A notification appliance that alerts by the sense of touch or vibration.
Spacing	A horizontally measured dimension related to the allowable coverage of fire detectors.	Textual Audible Notification Appliance	A notification appliance that conveys a stream of audible information. An example of a

	textual audible notification appliance is a speaker that reproduces a voice message.
Textual Visible Notification Appliance	A notification appliance that conveys a stream of visible information that displays an alphanumeric or pictorial message. Textual visible notification appliances provide temporary text, permanent text, or symbols. Textual visible notification appliances include, but are not limited to, annunciators, monitors, CRTs, displays, and printers.
Transponder	A multiplex alarm transmission system functional assembly located at the protected premises.
Trouble Signal	A signal initiated by the fire alarm system or device indicative of a fault in a monitored circuit or component.
Two-Wire Smoke Detector	A smoke detector which initiates an alarm condition on the same two wires that also supply power to the detector.
Visible Notification Appliance	A notification appliance that alerts by the sense of sight.
Voice Intelligibility	Audible voice information that is distinguishable and understandable.
Zone	A defined area within the protected premises. A zone can define an area from which a signal can be received, an area to which a signal can be sent, or an area in which a form of control can be executed.

3. Prepare for Installation

3.1 Receive, Inventory and Store Equipment

- a) Check received equipment against the packing list and the job bill of material
- b) Check equipment for shipping damage
- c) Store equipment in a dry, safe place

3.2 Documents

Have access to the following:

- a) Shop drawings
- b) Manufacturer's installation instructions
- c) Local code, as required
- d) Record of Completion (NFPA 72-1999, Figure 1-6.2.1) *Note: This document is available from AFSA, P.O. Box 951807, Lake Mary, FL 32795-1807.*

3.3 Tools

Common hand tools and a volt/ohm meter are required to install a fire alarm system. Refer to manufacturer's literature to determine if special tools are required: e.g., keys for cabinets and manual fire alarm boxes, drivers for tamper-proof screws used on field devices and outdoor junction boxes, and a wrist strap (to prevent electrostatic damage to electronic components).

3.4 Job Supervision

NFPA 72, 1-5.1.4 requires that, "Installation personnel shall be supervised by persons who are qualified and experienced in the installation, inspection, and testing of fire alarm systems. Examples of qualified personnel shall include, but not be limited to, the following:

- (1) Factory trained and certified personnel
- (2) National Institute of Certification in Engineering Technologies (NICET) fire alarm level II certified personnel
- (3) Personnel licensed or certified by state or local authority

3.5 Plan the Installation

This section lists the major steps for installing a fire alarm system. Installation procedures provide detailed instructions.

- a) Rough-in (mount) the control unit enclosure (back box) [See 4.0]
- b) Install system wiring [See 5.0]
- c) Install field devices [See 6.0]
- d) Check system wiring [See 7.0]
- e) (Re-)Install assemblies in control unit back box, as required [See 8.0]
- f) Terminate system wiring [See 8.0]
- g) Program system functions [See 8.0]
- h) Perform a complete system test [See 8.0]
- i) Complete job documentation

3.6 Job Pacs

During the installation planning process, especially on large jobs, consider using "Job Pacs." Job Pacs may provide for efficient management of the installa-

tion equipment. Job Pacs provide an additional control of job site equipment.

Job Pacs (one or more sequentially numbered boxes) contain the equipment required for a floor, wing, or room. Enter the Job Pac number on the shop drawings for job site coordination. Example: Job Pacs #12W1 and #12W2 may contain smoke detectors, fire alarm boxes, and strobes and speakers necessary to complete the installation of field devices on the 12th floor, west wing.

4. Install Fire Alarm Control Unit(s)

4.1 Code References

NFPA 72 Paragraph 1-5.2.2
Paragraph 3-8.4.1.3.3
Paragraph 3-8.4.1.3.5.5

4.2 Installation Guidelines

A fire alarm system consists of one or more control units. A master control unit connects to other control units or interface panels.

Fire alarm control units ship in various combinations:

- a) Enclosures may be shipped separately (no electronic assemblies) for job rough-in.
- b) Enclosures, control unit doors, and the electronic assemblies may be individually packaged and shipped together in an over-pack.
- c) Enclosures may be shipped complete, with the electronic assemblies installed in the enclosure.

4.3 Enclosure Installation

The general procedures listed below should be used when installing a back box. If the enclosure is shipped separately, some steps can be omitted. Manufacturers provide specific installation instructions with the fire alarm control unit or empty enclosure.

- a) Carefully open the shipping container.
- b) Inventory the contents of the shipping container to ensure complete shipment of the required materials. (See packing list.)
- c) Remove the fire alarm control unit from the shipping container.
- d) Remove door (cover).
- e) Remove any internal doors or dead-front covers.
- f) Tag one end of each interconnection cable, if required.
- g) Remove one end of all interconnection cables from the electronic assemblies, if required.
- h) Remove electronic assemblies and power supplies using directions supplied by the manufacturer. *Note: The use of a grounded wrist strap is recommended to prevent electrostatic damage to electronic components when removing or /replacing electronic assemblies.*
- i) Carefully wrap and place the covers, internal doors and dead-fronts, and electronic assemblies in the shipping container.
- j) Store the shipping container in a safe, clean, and dry location until system field wiring is completed, and job conditions permit mounting the electronics and door. The control unit will be reassembled after installation of the system wiring and field devices.
- k) Fire alarm control unit enclosures may be installed surface, semi-flush, or flush mounted, according to manufacturers' instructions.
- l) Use the enclosure as a template for marking the location of the mounting holes.
- m) Mount enclosure so accidental operation or failure is not caused by vibration or jarring.
- n) The power source for the control unit must be between 85% and 110% of nameplate rating (102

VAC to 132 VAC for 120 VAC rated control unit).

o) Connections to light and power service shall be on a dedicated branch circuit(s).

p) Provide mechanical protection for the power supply circuits(s) and connections.

q) Locate the circuit disconnecting means to accessible only to authorized personnel.

r) Provide a red marking, "FIRE ALARM CIRCUIT CONTROL", to identify the circuit disconnecting means.

s) Provide a permanent identification of the location of the circuit disconnecting means at the fire alarm control unit.

t) The room temperature must be maintained between 0°C (32°F) and 49°C (120°F).

u) The relative humidity must be less than 85% at 30°C (86°F). *Note: Panels may be listed for operation outside of the voltage, temperature and humidity limitations listed above. Check manufacturer's installation instructions shipped with the equipment.*

v) Locate the fire command center, if applicable, within a minimum 1-hour fire-rated area, or other space approved by the Authority Having Jurisdiction.

w) Provide at least 900 mm (3 ft) of clearance in front of the fire command center control equipment.

x) The fire alarm control unit shall be provided at a building entrance or other location approved by the authority having jurisdiction.

y) Install battery enclosure adjacent to fire alarm enclosure, if provided. Limit conduit entry to bottom corners of enclosure, if possible.

b) Some enclosures may be "butted" together, while others must be slightly spaced and close-nipped, to assure covers can be opened.

c) Observe space reserved for installation of batteries, usually in the bottom of the fire alarm control unit enclosure. Refer to manufacturers' instructions.

4.4 Cautions

a) Provide sufficient space from walls and other equipment so the door can be opened 90°, minimum, or as necessary to install door.

5. Install System Wiring

5.1 Code References

NFPA 70, Article 760 and referenced Sections
NFPA 72, Paragraph 1-5.5.4

5.2 Circuits With Special Requirements

Fire alarm circuits are referred to in a variety of ways. For example, a circuit can be a Power-limited, Class B, Initiating Device Circuit. It is important to understand these terms before installing fire alarm circuits.

A fire alarm control connects to the following types of circuits: Initiating Device Circuit (IDC), Notification Appliance Circuit (NAC), and Signaling Line Circuit (SLC). See Definitions. Each of these circuits is installed to operate either Class A or Class B. See Definitions. Some circuits must be installed

in a 2-hour fire-rated cable, or a 2-hour rated fire-enclosure or shaft.

The power source connected to the circuits determines whether the circuits are power-limited or non-power-limited. A non-power-limited circuit has a maximum of 600 volts with no current limitation. The typical non-power-limited circuit is 24 VDC, and up to 10 amps; or 70 VAC and a few hundred watts for speakers. A power-limited circuit is limited to 100 VA, with voltage limited to 150 volts at the 100 VA power level. The typical power-limited circuit is 24 VDC, 4 amps.

The methods and materials used must meet NEC Article 760 requirements. Additionally, NFPA 72 describes certain circuits having installation requirements over and above NEC requirements.

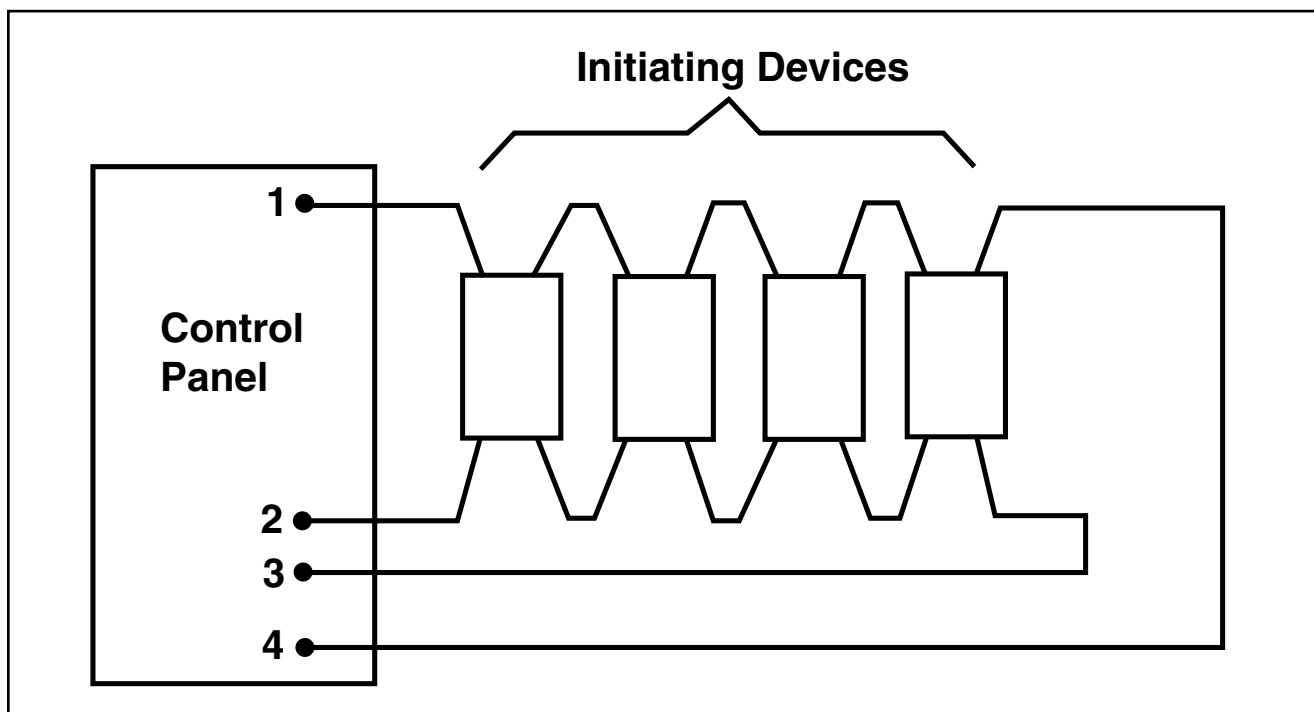


Figure 1. Class A IDC. (Figure reprinted with permission of the NJATC.)

Figure 1 shows a Class A IDC. The end-of-line device (resistor) is factory installed, internally.

Figure 2 shows a Class B NAC. The end-of-line device connects after the last device on the circuit.

The following paragraphs, 5.2.1, 5.2.2, and 5.2.3, describe the installation requirements that are in addition to NEC requirements:

5.2.1 Class A Circuits

Install Class A circuit conductors so the outgoing and return conductors, exiting from and returning to the control unit are routed separately. The outgoing and return (redundant) circuit conductors must not be run in the same cable assembly, enclosure, or raceway. Exceptions follow:

- a) For a distance not to exceed 3.0 m (10 ft) where the outgoing and return conductors enter or exit the initiating device, notification appliance, or control unit enclosures.
- b) Where the vertically run conductors are contained in a 2-hour rated cable assembly (circuit integrity cable) or enclosed (installed) in a 2-hour rated enclosure. [See NFPA 70, Sections 760-31(f) and 760-71(g) for circuit integrity cable requirements.]

c) Where looped raceway systems are provided, single conduit/raceway drops to individual devices or appliances shall be permitted.

d) Where looped raceway systems are provided, single conduit/raceway drops to multiple devices or appliances installed within a single room not exceeding 92.9 m² (1000 ft²) in area shall be permitted. [See NFPA 72, paragraph 3-4.2.2.2.]

5.2.2 Notification Appliance Circuits

Where building occupant relocation or partial evacuation during a fire emergency is required, the following applies:

Install notification appliance circuits and any other circuits necessary for the operation of the notification appliance circuits protected from the point at which they exit the control unit until the point that they enter the notification zone that they serve using one or more of the following methods:

- a) A 2-hour fire-rated cable assembly (circuit integrity cable) [See NEC Sections 760-31(f) and 760-71(g) for circuit integrity cable requirements.]
- b) A 2-hour fire-rated shaft or enclosure

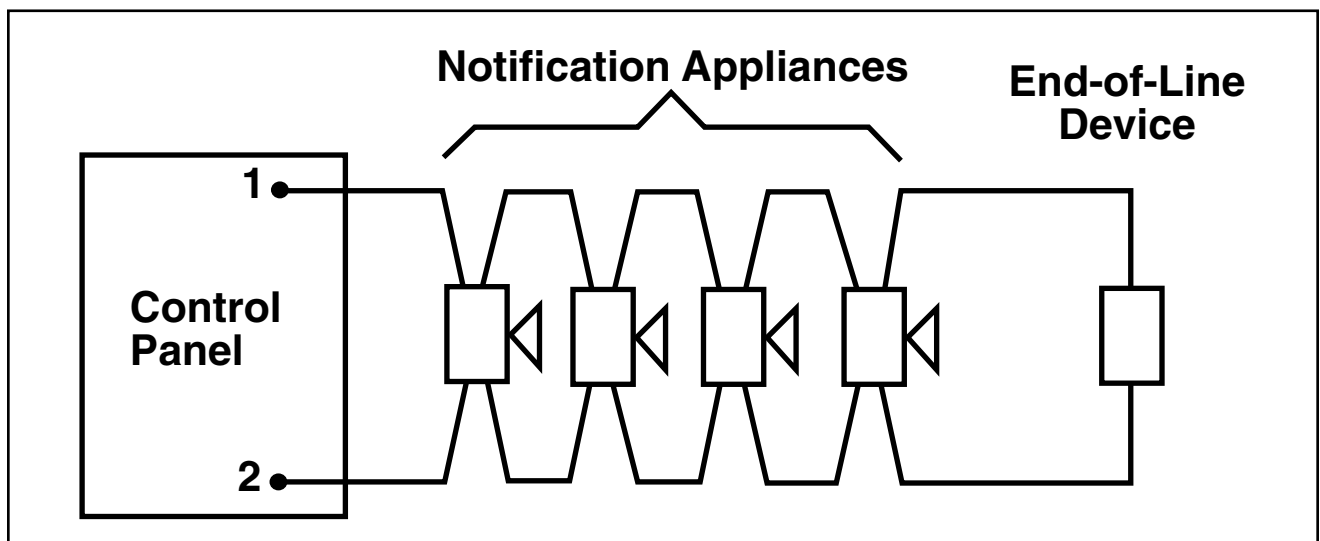


Figure 2. Class B NAC. (Figure reprinted with permission of the NJATC.)

c) A 2-hour fire-rated stairwell in a building fully sprinklered in accordance with NFPA 13, *Standard for the Installation of Sprinkler Systems* [See NFPA 72, paragraph 3-8.4.1.1.4.]

5.2.3 Fire Command Center remote from Fire Alarm Control Unit

If the fire command center control equipment is remote from the fire alarm control unit, the following requirements shall apply:

- a) The interconnecting wiring shall be provided with mechanical protection by installing the wiring in metal raceway.
- b) The interconnecting wiring shall be provided with resistance to attack from a fire by routing the wiring through areas whose characteristics are at least equal to the limited-combustible characteristics defined in NFPA 90A, *Standard for the Installation of Air Conditioning and Ventilating Systems*.
- c) If the interconnecting wiring exceeds 30 m (100 ft), additional resistance to attack from a fire shall be provided by doing either of the following:
 - 1) Installing the wiring in metal raceway in a 2-hour fire-rated enclosure
 - 2) Enclosing the wiring in a 2-hour fire-rated cable assembly (circuit integrity cable) and installing the cable in metal raceway [See NFPA 72, paragraph 3-8.4.1.3.3.3.] [See NEC Sections 760-31(f) and 760-71(g) for circuit integrity cable requirements.]

5.3 Installation Guidelines

Article 760 of the NEC contains the requirements for installation of fire alarm system circuits: Non-power-limited, and power-limited. These two types of circuits must be installed separate from each other. That is, do not install non-power-limited and power-limited circuits in the same cable or raceway. Power circuit conductors are permitted to be installed in the same raceway with non-power-limited circuits, where the power circuit is functionally associated with the

system—typically power for the control unit. Non-power-limited, power-limited, and control unit power circuits are permitted in a common enclosure.

5.3.1 General Requirements (NEC, Article 760, Part A)

- a) Install all wiring to meet the requirements of NEC Article 760, unless the NEC conflicts with local code. Local code prevails.
- b) Identify fire alarm circuits at terminal and junction locations. An excellent practice is to install red covers labeled “Fire Alarm Circuit.”
- c) Support cables by the building structure.
- d) Install circuits extending beyond one building according to the requirements of NEC Section 760-7, which refers to Article 225 and Article 800, Parts B, C, and D.

5.3.2 Non-power-limited circuits (NEC, Article 760, Part B)

- a) Non-power-limited circuits shall be installed using any of the three following methods:
 - 1) Conductors from Table 310-13 installed in accordance with the requirements of Sections 110-3(b), 300-11(a), 300-17, and other appropriate articles of Chapter 3 (e.g., Article 331 when installing ENT, Article 348 when installing EMT).
 - 2) Conductors from Table 402-5 that are listed in Section 760-27(b) installed in raceway.
 - 3) Multiconductor cables described in Section 760-30 used on circuits operating at less than 150 volts to ground installed in raceway or exposed.
- b) Solid or stranded copper conductors must be used.
- c) Install overcurrent protection for each conductor at the point where the conductor receives its supply.
- d) Install multiconductor non-power-limited fire alarm cables as follows:

- 1) In raceway or exposed on surface of ceiling and sidewalls or in concealed spaces.
- 2) Cable must be protected to a height of 2.1m (7 ft) by building construction, metal raceway, or rigid nonmetallic conduit.
- 3) Cables installed in hoistways must be in rigid metal conduit, rigid nonmetallic conduit, intermediate metal conduit or electrical metallic tubing.
- 4) Install Type NPLFP (plenum cable) in other space used for environmental air. This includes ceiling and raised floor plenum spaces. Do not install cable in air ducts.
- 5) Install Type NPLFR (riser cable) in a vertical run in a shaft or from floor to floor.
- 6) Install Type NPLF for general applications.

5.3.3 Power-limited circuits (Article 760, Part C)

a) Power-limited circuits shall be installed using any of the three following methods:

- 1) Conductors from Table 310-13 installed in accordance with the requirements of Sections 110-3(b), 300-11(a), 300-17, and other appropriate articles of Chapter 3 (e.g., Article 331 when installing ENT, Article 348 when installing EMT).
- 2) Conductors from Table 402-5 conductors that are listed in Section 760-27(b) installed in raceway.
- 3) Multiconductor cables described in Section 760-30 installed in raceway or exposed.

b) Solid or stranded copper conductors must be used. The single exception to this requirement is for coaxial cable, which is permitted to have a 30% conductivity copper-covered steel center conductor. Conductors smaller than size 26 AWG are not permitted, with 26 AWG requiring special termination methods.

c) Install multiconductor power-limited fire alarm cables as follows:

- 1) In raceway or exposed on surface of ceiling and sidewalls or in concealed spaces.
- 2) Cable must be protected to a height of 2.1 m (7 ft) by building construction, metal raceway, or rigid nonmetallic conduit.
- 3) Cables installed in hoistways must be in rigid metal conduit, rigid nonmetallic conduit, intermediate metal conduit or electrical metallic tubing.
- 4) Install Type FPLP (plenum cable) in air ducts and other space used for environmental air.
- 5) Install Type FPLR (riser cable) in a vertical run in a shaft or from floor to floor.
- 6) Install Type FPL for general applications. *Note: See NEC, Section 760-53(f) for permitted cable substitutions to Types FPLP, FPLR, and FPL.*
- 7) Install Optical Fiber Cable according to the requirements in NEC, Article 770

5.4 Cautions

a) **Insulation is not a means of separation of circuits.** Power-limited circuit conductors and cables must not be installed in a raceway with non-power-limited and power circuit conductors and cables. Conductors of a non-power-limited circuit are protected by overcurrent protection. Conductors of a power-limited circuit are protected by a power-limited power source, 100 VA, maximum. A fault between these two types of circuits could cause a fire or shock hazard.

b) Some jurisdictions have a requirement that fire alarm cables must be red in color.

c) The manufacturer's installation instructions for each device show mounting and termination methods.

6. Install Field Devices

Review the following before installing field devices:

a) Do not “T-tap” detectors. The exception is addressable detectors on a Class B circuit, if permitted by the manufacturer. Refer to manufacturer’s Installation Instructions.

b) Figure 3 shows correct and incorrect termination methods.

c) Figure 4 shows correct and incorrect termination methods on various types of field devices.

d) Figure 5 shows connections to a 4-wire smoke detector circuit (IDC). Note the relay at the end of the power circuit. An end-of-line relay must be connected at the end of each power circuit.

6.1 Manual Fire Alarm Station (Box)

6.1.1 Code References

NFPA 72 Paragraph 2-8

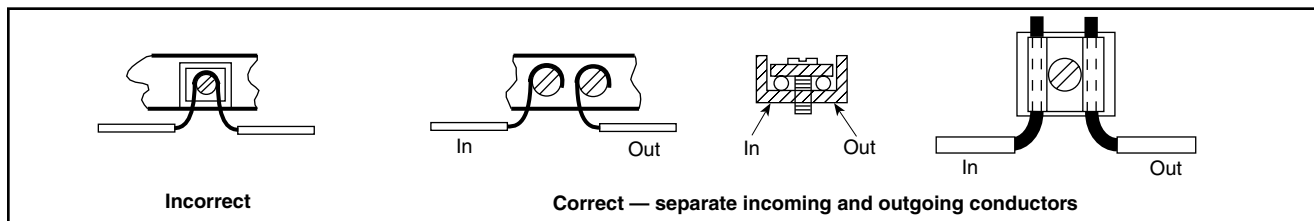


Figure 3. Correct and incorrect termination methods.

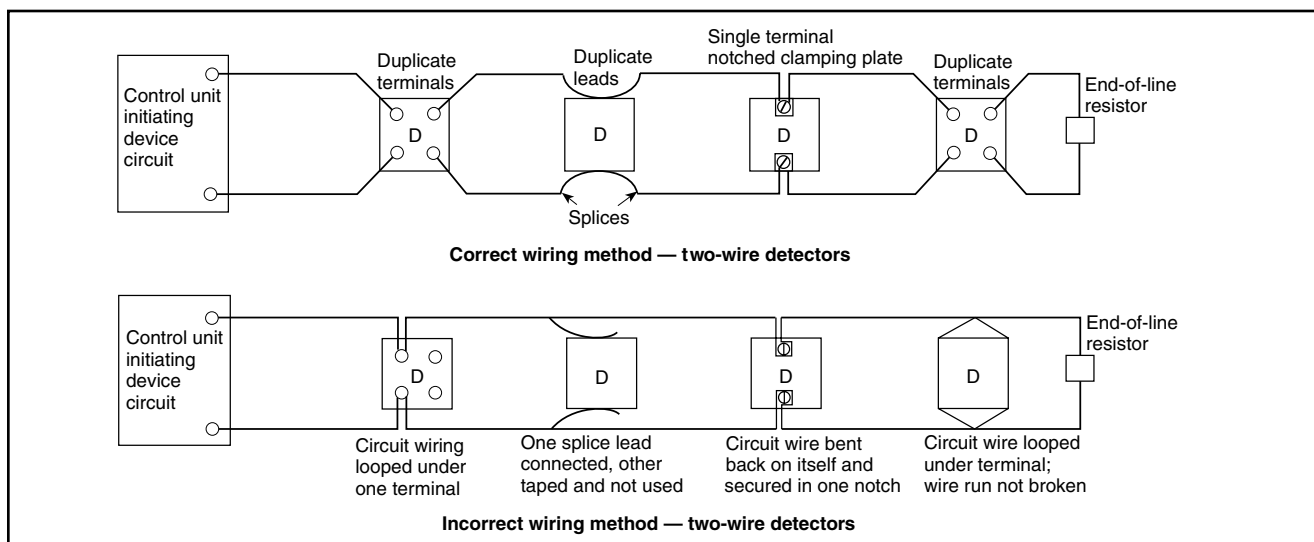


Figure 4. Correct and incorrect termination methods on various types of field devices.

Figures 3 and 4 reprinted with permission from NFPA 72-1999, Copyright© 1999, National Fire Alarm Code® Handbook, National Fire Protection Association, Quincy, MA 02269. The reprinted material is not the referenced subject which is represented only by the standard in its entirety.

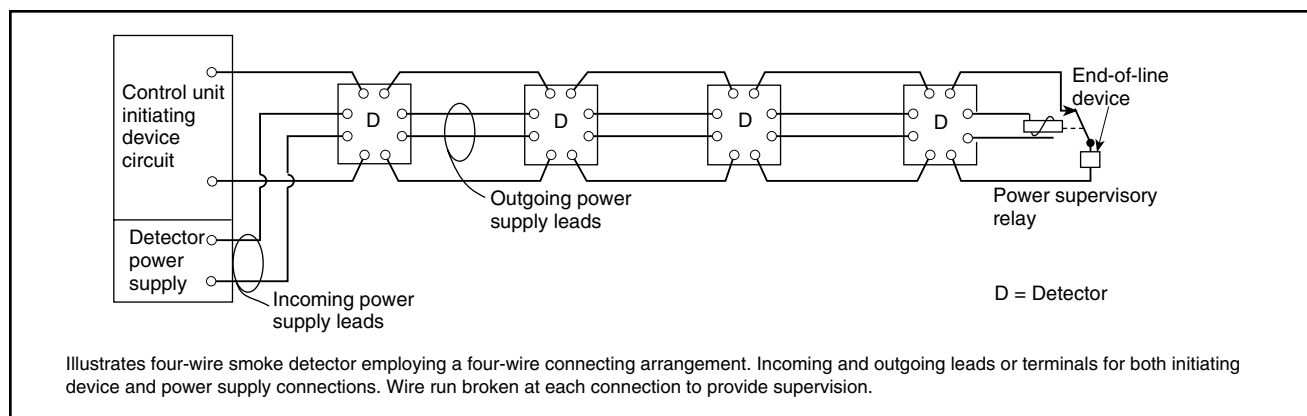


Figure 5. Connections to a 4-wire smoke detector circuit (IDC).

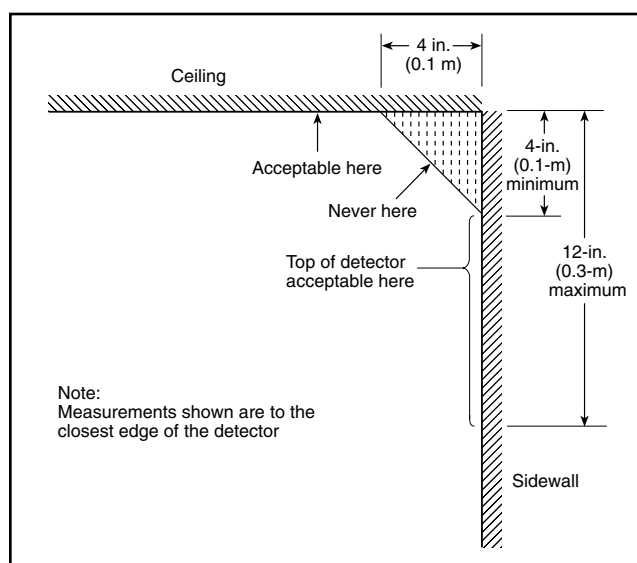


Figure 6. Example of proper mounting for detectors.

6.1.2 Installation Guidelines

- Mount the bottom of the electrical box 1.1 m (42 inches) above the floor. NFPA 72 requires that the operable part of each manual fire alarm station shall be not less than 1.1 m (42 in) and not more than 1.4 m (4 ft) above the floor level.
- Mount manual fire alarm stations within 1.5 m (5 ft) of the exit doorway opening.
- The horizontal travel distance between manual fire alarm stations must be less than 61 m (200 ft).

6.1.3 Cautions

- Do not mount where the manual fire alarm station will be hidden from view by obstructions.
- Door widths (multiple doors) over 12.2 m (40 ft) wide require manual fire alarm stations on each side of the set of doors.

6.2 Area Smoke Detectors (Spot-type)

6.2.1 Code References

NFPA 72, Paragraph 2-3

6.2.2 Installation Guidelines

- Mount detectors on the ceiling not less than 100 mm (4 in.) from a side wall to the near edge or, if on a side wall, between 100 mm (4 in.) and 300 mm (12 in.) down from the ceiling to the top of the detector (see Figure 6).
- Mount detectors at least 900 mm (3 ft) from air diffusers (see Figure 7).
- On smooth ceilings, spacing of up to 9.0 m (30 ft) is permitted, based on spacing rating. The distance from a detector to the corner of a room must be 0.7 times the spacing rating, or less. There are additional paragraphs requiring reduced spacing for ceilings over 3.0 m (10 ft), air changes greater than six per

Figures 5 and 6 reprinted with permission from NFPA 72-1999, Copyright© 1999, National Fire Alarm Code® Handbook, National Fire Protection Association, Quincy, MA 02269. The reprinted material is not the referenced subject which is represented only by the standard in its entirety.

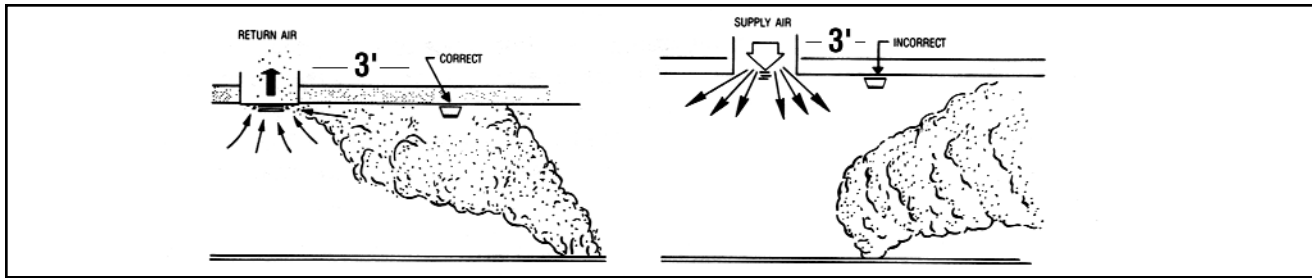


Figure 7. Detector placement – air supply and/or return ducts. (Reprinted from NEMA Guide for Proper Use of System Smoke Detectors by permission of the National Electrical Manufacturers Association.)

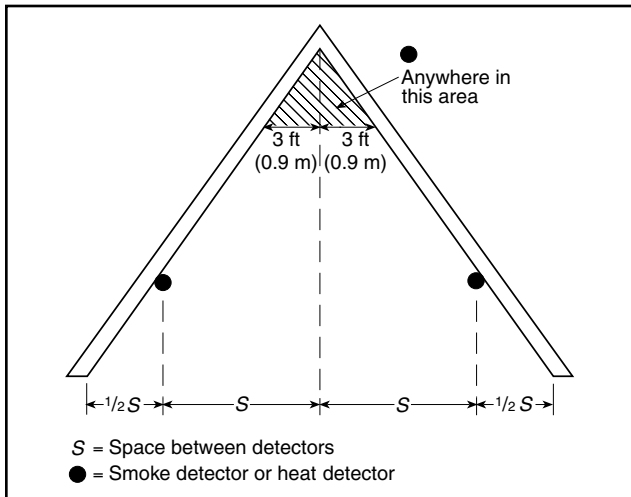


Figure 8. Smoke or heat detector spacing layout, sloped ceilings (peaked type).

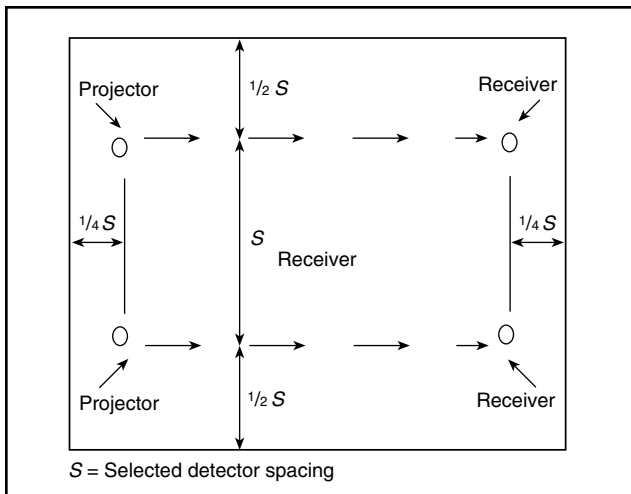


Figure 9. Maximum distance at which ceiling-suspended light projector and receiver can be positioned from end wall is one-quarter selected spacing (S).

Figures 8 and 9 reprinted with permission from NFPA 72-1999, Copyright© 1999, National Fire Alarm Code® Handbook, National Fire Protection Association, Quincy, MA 02269. The reprinted material is not the referenced subject which is represented only by the standard in its entirety.

hour, beams, joists, and partitions. Determination of correct spacing is part of system design, and typically shown on shop drawings.

d) Mount detectors within 900 mm (3 ft) of the highest point of a sloped or peaked ceiling (see Figure 8).

e) Mechanical guards must be listed for use with the detectors.

f) Detectors must be supported independently of the attached circuit conductors.

g) Conventional 2-wire and addressable smoke detectors must be listed for compatibility with the control unit. *Note: Conventional 4-wire (separate power) smoke detectors do not require compatibility listing.*

h) Mount detectors on electrical boxes, unless equipped with listed fittings. Manufacturer's installation instructions shipped with the detector will show permitted mounting methods.

i) Install end-of-line devices electrically beyond the last detector. If convenient, connect the end-of line device to the last detector on the circuit.

j) Observe polarity, if required.

6.2.3 Cautions

a) Protect detectors from job site dust and airborne contamination. Do not install detectors until the

jobsite is ready for occupancy. Leave the shipping cover in place until system acceptance testing.

- b) Do not recess detectors into the mounting surface.

6.3 Beam Smoke Detector

6.3.1 Code References

NFPA 72, Paragraph 2-3.4

6.3.2 Installation Guidelines

- a) Mount beam detector transmitter and receiver on stable surfaces to prevent nuisance or erratic operation due to movement. While mirrors are permitted, some manufacturers recommend mirrors not be used. Do not pendant-mount the transmitter or receiver (i.e., hang from the ceiling on a length of conduit or mount on a pole).

- b) Select mounting positions where the beam path will be free of objects, such as lift trucks, which may block the beam path (see Figure 9). This figure shows the detector may be mounted away from a wall up to half the spacing rating.

- c) Mount on walls and ceilings not subject to building movement or vibration.

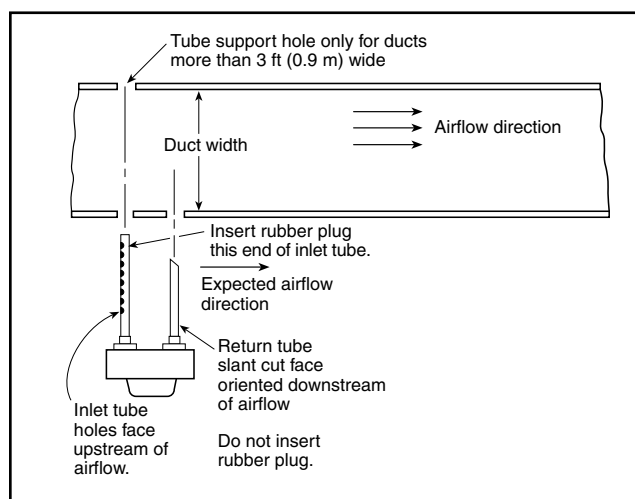


Figure 10. Inlet tube orientation.

6.3.3 Cautions

- a) Do not mount the transmitter and receiver where the beam may be blocked by future partitions or walls.
- b) Avoid mounting in areas where there may be smoke from kitchens and garages.
- c) Do not mount where hot or cold air blow across the beam path. Heaters blowing across the beam path can distort the beam, causing the signal at the receiver to vary.
- d) Do not mount where the receiver is exposed to sunlight and light from extremely bright sources such as high-pressure sodium, mercury vapor, and metal halide lights.

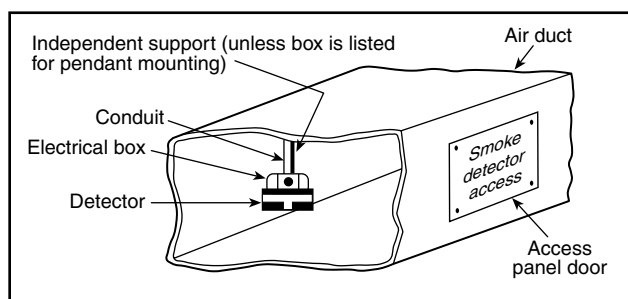


Figure 11. Product-mounted air duct installation.

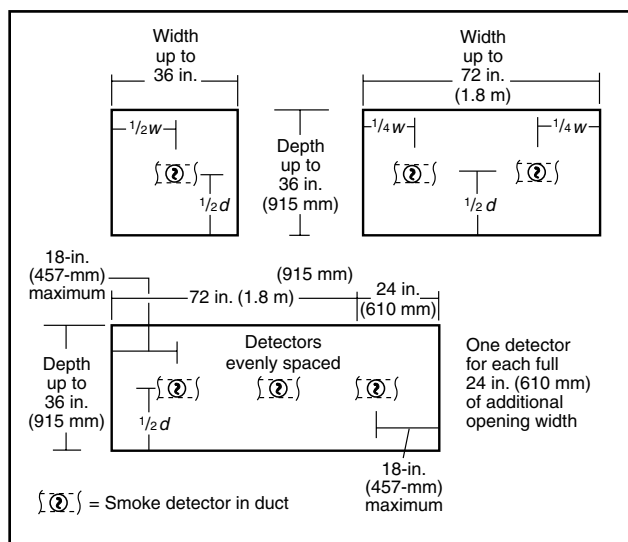


Figure 12. Location of a smoke detector(s) in return air system openings for selective operation of equipment.

Figures 10, 11 and 12 reprinted with permission from NFPA 72-1999, Copyright© 1999, National Fire Alarm Code® Handbook, National Fire Protection Association, Quincy, MA 02269. The reprinted material is not the referenced subject which is represented only by the standard in its entirety.

6.4 Duct Smoke Detector

Review the following before installing duct smoke detectors:

a) The two types of duct smoke detectors are: A detector using sampling tubes inserted in the air stream, and a spot-type detector listed for air duct application. A detector with sampling tubes mounts on supply or return air ducts (*see Figure 10*). Spot-type detectors are typically mounted above a dropped ceiling directly in front of the return air duct, and are also listed for mounting in an air duct (*see Figures 11 and 12*).

b) Duct smoke detectors are not a substitute for area smoke detectors. The primary purpose of a duct smoke detector is to shut down the fan when smoke is detected in the air duct.

6.4.1 Code References

NFPA 72, Paragraph 2-10
NFPA 90A Chapter 4

6.4.2 Installation Guidelines

a) Select a mounting location 6 to 10 duct widths downstream from or prior to an air duct restriction or bend. See Cautions.

b) Select a mounting location for the detector or detector sampling tubes downstream of the fan and filters and ahead of any branch connections in the supply air duct.

c) Remove cover and electronic assemblies, if required, from detector housing.

d) For the sampling tube detector, use the detector housing, or provided template, to mark the holes for mounting the sampling tubes and housing.

e) Install the gasket material, if provided or required around the drilled holes.

f) Mount the detector housing.

g) Insert the sampling tubes with the holes of the inlet tube facing the airstream. For tubes longer than 3 feet, support internally or pass through the duct. If the tube protrudes through the other side of the duct, seal the exit hole (*see Figure 10*).

h) If the duct smoke detector is an area type, mounted in the duct, an access door shall be provided. [(Ref: NFPA 72-1999, paragraph 2-10.5.3)] (*See Figure 11.*)

i) Select a mounting location for the detector or detector sampling tubes at each story prior to the connection to a common return and prior to any recirculation or fresh air inlet connection in the air return system. This is usually above a dropped-ceiling (*see Figure 12*).

j) Terminate wiring per shop drawings and manufacturer's literature.

k) Reassemble cover and electronic assemblies, as required.

6.4.3 Cautions

a) Mechanical contractors often install duct smoke detectors, which must be connected to the fire alarm system, if one exists in the building. Coordination between building trades will assure successful job completion.

b) It is often impossible to install duct detectors to meet the 6 to 10 duct widths downstream from or prior to a duct restriction or bend. In those situations, install the duct smoke detector as far as possible from bends and restrictions. The tests run with the inclined plane manometer or magnehelic over the possible range of air velocities will determine if the location is correct. See manufacturer's instructions.

6.5 Heat Detectors (Spot-type)

6.5.1 Code References

NFPA 72, Paragraph 2-2

6.5.2 Installation Guidelines

- a) Mount spot-type heat-sensing detectors on the ceiling not less than 100 mm (4 in.) from a side wall to the near edge or, if on a side wall, between 100 mm (4 in.) and 300 mm (12 in.) down from the ceiling to the top of the detector (see Figure 6).
- b) Mount detectors so that the distance between detectors shall not exceed their listed spacing. The distance from a detector to the corner of a room must be 0.7 times the spacing rating, or less. There are additional code paragraphs requiring reduced spacing for ceilings over 3.0 m (10 ft), beams, joists, and partitions. Determination of correct spacing is part of system design (see Figure 13).
- c) Mechanical guards must be listed for use with the detector.
- d) Detectors must be supported independently of the attached circuit conductors.

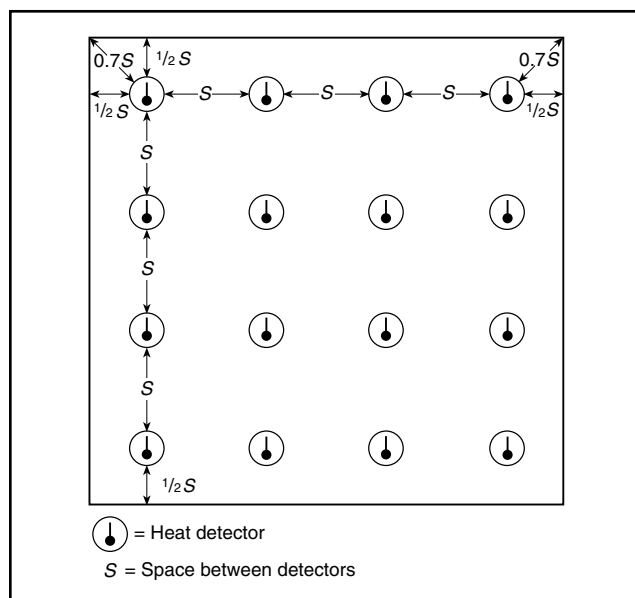


Figure 13. Spot-type detectors.

Figure 13 reprinted with permission from NFPA 72-1999, Copyright© 1999, National Fire Alarm Code® Handbook, National Fire Protection Association, Quincy, MA 02269. The reprinted material is not the referenced subject which is represented only by the standard in its entirety.

- e) Mount detectors on electrical boxes, unless equipped with listed fittings. Manufacturer's installation instructions shipped with the detector will show permitted mounting methods.
- f) Install end-of-line devices electrically beyond the last detector. If convenient, connect the end-of line device to the last detector on the circuit.

6.5.3 Cautions

- a) Do not "T-tap" detectors. Installation of 3 or more conductors in a single wire nut or under a terminal screw is a "T-tap." The exception is addressable detectors on a Class B circuit where permitted by the manufacturer.
- b) Protect detector from job site dust and airborne contamination. Do not install detector until the job-site is ready for occupancy. Where provided, leave shipping cover in place until system acceptance testing.
- c) Do not recess detectors into the mounting surface.

6.6 Waterflow Switches

Sprinkler systems companies normally install waterflow switches. This section addresses the types of devices connected to the fire alarm system, not how to install them. There are two basic types of waterflow devices, which when activated provide an "alarm" signal at the fire alarm control unit. The types of waterflow switches are:

- a) Paddle-type (paddle installed in the sprinkler pipe)
- b) Pressure

6.6.1 Code References

NFPA 72, Paragraph 2-6

6.6.2 Installation Guidelines

Terminate fire alarm conductors per shop drawings and manufacturer's literature.

6.6.3 Cautions

Coordinate with other trades, as required, when connecting to these devices.

6.7 Supervisory Switches

Sprinkler systems companies normally install suppression system supervisory devices. This section addresses the types of devices connected to the fire alarm system, not how to install them. There are a number of different types of supervisory devices, which when activated provide an “off-normal” signal at the fire alarm control unit. Supervisory devices may be installed to monitor the following:

- a) Control valve
- b) Pressure (air, water, steam)
- c) Water level
- d) Temperature (water tank, room)

6.7.1 Code References

NFPA 72, Paragraph 2-9

6.7.2 Installation Guidelines

- a) Terminate fire alarm conductors per shop drawings and manufacturer’s literature.

6.7.3 Cautions

- b) Coordinate with other trades, as required, when connecting to these devices.

6.8 Audible Notification Appliances (bells, horns, speakers, chimes)

6.8.1 Code References

NFPA 72, Paragraph 4-3

6.8.2 Installation Guidelines

- a) Install notification appliances on the ceiling or wall. Where wall-mounted, appliances shall have their tops above the floor at heights of not less than

2.3 m (90 in.), if possible, and the appliances must be mounted at least 150 mm (6 in.) below the ceiling.

- b) Mechanical guards must be listed for use with the appliances.

- c) Appliances must be supported independently of the attached circuit conductors.

- d) Mount appliances on electrical boxes, unless equipped with listed fittings. Manufacturer’s installation instructions shipped with the appliances detector will show permitted mounting methods.

6.8.3 Cautions

- a) Appliances used in special environments, such as, outdoors, high or low temperatures, high humidity, dusty conditions, and hazardous locations must be listed for the application.

6.9 Visible Notification Appliances (Strobes)

6.9.1 Code References

NFPA 72, Paragraph 4-4

6.9.2 Installation Guidelines

- a) Install notification appliances on the ceiling or wall. Where wall-mounted, the lens of the appliance should be not less than 2.0 m (80 in.) and not greater than 2.4 m (96 in.) above the floor. Visible notification appliances listed for ceiling mounting must be mounted or suspended at or below 9.14 m (30 ft).

- b) Appliances shall be located not more than 4.5 m (15 ft) from the end of a corridor.

- c) Appliances shall be located at a separation of not greater than 30.0 m (100 ft) in a corridor.

- d) Appliances shall be supported independently of the attached circuit conductors.

- e) Mount appliances on electrical boxes, unless equipped with listed fittings. Manufacturer’s installation instructions shipped with the appliance will show permitted mounting methods.

6.9.3 Cautions

- a) Compare shop drawings to the actual space to assure strobes are not blocked from view.
- b) Appliances used in special environments, such as, outdoors, high or low temperatures, high humidity, dusty conditions, and hazardous locations must be listed for the application.
- c) Combination audible/visible appliances must follow the guidelines for visible appliances.

6.10 DACT (Digital Alarm Communicator Transmitter)

The DACT is the most widely used type of off-premises signaling device. Where another type of device is used, follow manufacturer's instructions. The DACT sends signals to a DACR (Digital Alarm Communicator Receiver) at a remote location. The off-site monitoring organization typically makes the connections to the DACR in a Central Station or Remote Supervising Station. For most systems, there are 2 phone lines connected to a DACT. The following list shows all the options for signal transmission:

- a) Two telephone lines (numbers)
- b) One telephone line (number) and one cellular telephone connection
- c) One telephone line (number) and a one-way radio system
- d) One telephone line (number) equipped with a derived local channel
- e) One telephone line (number) and a one-way private radio alarm system
- f) One telephone line (number) and a private microwave radio system
- g) One telephone line (number) and a two-way RF multiplex system

- h) A single integrated services digital network (ISDN) telephone line using a terminal adapter specifically listed for supervising station fire alarm service, where the path between the transmitter and the switched telephone network serving the central office is monitored for integrity so that the occurrence of an adverse condition in the path shall be annunciated at the supervising station within 200 seconds.

6.10.1 Code References

NFPA 72 Paragraph 5-5.3.2.1

6.10.2 Installation Guidelines

- a) Connect the DACT to the public switched telephone network upstream of any private telephone system at the protected premises. Connect the DACT to the building telephone system.
- b) If the second channel is not a phone line, connect to the other equipment per manufacturer's instructions and shop drawings. The second channel may be a cell phone, RF transmitter, or other method listed in 6.10.

6.10.3 Cautions

- a) The DACT must be connected to a loop start telephone circuit, and not to a ground start telephone circuit.
- b) The DACT must connect to the phone line ahead of all phones and switchboard connections.
- c) The DACT must disconnect any phone that is off-hook and seize control of the phone lines.

7. Check System Wiring

7.1 Wiring Test Guidelines

- a) Make sure all conductors or cables are identified (e.g., tagged) with permanent marking.
- b) A properly installed wiring system will have:
 - 1) No stray voltages
 - 2) No grounds
 - 3) No open circuits
 - 4) No short circuits
 - 5) Proper circuit resistance
- c) Perform the following tests before terminating the conductors at the FACP.
- d) Check wiring using the following sequence using a volt-ohm meter. The general procedure is to locate a wiring problem by “halving” the field circuit, until it is found.

7.2 Voltage (Stray)

- a) Set the meter to 300 VAC, or higher. Connect the meter leads across each pair of conductors. The voltage should read zero.
- b) Set the meter to 30 VDC or higher. Connect meter leads across each pair of conductors. Reverse the leads and measure for voltage again, unless a center-zero meter or polarity-sensing meter is used. The voltage should read zero.
- c) General troubleshooting procedure: Use extreme caution, as the voltage source is probably unknown. Go to a point electrically half way to the end of the circuit (e.g., device 8 out of 16). Disconnect both the incoming and outgoing leads from the device. Measure for voltage on both sets of conductors.

Leave this device disconnected. Continue to “halve” the circuit with the voltage until the stray voltage source is located.

7.3 Grounds

- a) Set the meter to the x10,000 ohms scale. Connect one of the meter leads to ground. Touch every conductor with the other meter lead. The resistance should read infinity—an open circuit.
- b) General troubleshooting procedures: The resistance measured on one conductor will be near zero, while the other conductor will probably be about equal to the resistance of the end-of-line device. Go to a point “electrically” half way to the end of the circuit, as shown on shop drawings. Disconnect both the incoming and outgoing leads from the device. Determine which lead is grounded. Leave the device disconnected and insulate the four conductors, individually (wire nut or tape). Continue to “halve” the circuit with the ground fault until the circuit fault is located.

7.4 Open Circuits

- a) Set the meter to the proper scale according to the manufacturer’s instructions. The reading will depend on the type of circuit being check and the value of the end-of-line device. Examples follow.
- b) The resistance of each Class B IDC and SLC will be equal to or a little less than the end-of-line device, usually between 1,000 ohms and 10,000 ohms, depending on the system. If a SLC does not have an end-of-line device, connect a resistor across the end of the circuit.
- c) The resistance of a Class B NAC circuit will be equal to or a little more than the end-of-line device

in one direction, usually between 1,000 ohms and 10,000 ohms, depending on the system. With the meter leads reversed the resistance will be on the order of 50 ohms or less.

d) For a Class A circuit, connect an end-of-line device (resistor) across the return conductors. Then, follow instructions above. Remove this device after checking for an open circuit.

e) General troubleshooting procedures: At the control unit, connect two end-of-line devices in series across the pair of conductors measuring open. This will make it easy to determine the direction, electrically, of the open circuit. Go to a point “electrically” half way to the end of the circuit as shown on the shop drawings. Disconnect both the incoming and outgoing leads from the device. Determine which pair of conductors is an open circuit. Leave the device disconnected and insulate each of the four conductors. Continue to “halve” the circuit with the open (maximum resistance) until the circuit fault is located.

7.5 Short Circuits

a) Short circuits are detected when checking for open circuits. During the open circuit test the resistance should not read zero, or just a few ohms, which is a short circuit signature.

b) General troubleshooting procedures: At the control unit, connect two end-of-line devices in series across the pair of conductors that are shorted. For a Class A circuit, also connect a single end-of-line device across the returning conductors. This will make it easy to determine the direction, electrically, of the short circuit. Go to a point “electrically” half way to the end of the circuit as shown on the shop drawings. Disconnect both the incoming and outgoing leads from the device. Determine which pair of conductors is shorted. Leave the device disconnected and insulate each of the four conductors. Continue to “halve” the circuit with the ground until the short is located.

8. Finish Control Unit Installation

Following successful performance testing of all system wiring, complete the installation of the fire alarm control unit (FACU) as follows:

- a) Mount electronic assemblies.
- b) Connect cables, as required.
- c) Terminate system wiring using shop drawings and manufacturer's literature, as required.
- d) Mount door.
- e) Attach ground wire to door to assure proper system operation and FCC compliance.
- f) Apply power.
- g) Program system functions using supplied documentation. Equipment suppliers often provide system programming as part of the contract. Special tools and software programs operated by factory-trained personnel are usually required, except for simple systems.

9. Check System Operation

Use the following procedure to test the operation of the fire alarm system. The actions taken will vary for new construction and retrofit installations. The procedure is based on retrofit work. Some steps can be omitted for new construction, prior to a certificate of occupancy being issued. Some systems may not include all tests described. Where systems include equipment not covered in the following procedure, refer to manufacturer's instruction.

9.1 Notification of Testing

- a) Notify Fire Department Dispatch
- b) Notify building occupants
- c) Notify monitoring facility if system is monitored off-premises

9.2 Control Unit Tests

- a) Documentation
 - Have Record (As-Built) Drawings available.
 - Make sure zone indicators are properly labeled
 - Make sure there is a smoke detector protecting the control unit.
- b) Control unit in normal condition.
 - Power indicator on.
 - No trouble or alarm indicators on.
- c) Operate lamp test switch.
 - All indicators on
- d) Check for ground fault indication. [Connect a jumper from an initiating or signaling line circuit to ground (conduit, system cabinet, etc.).]
 - Ground fault indicator on (if applicable).
- e) Operate main breaker to disconnect AC power.
 - Make sure the location of breaker is indicated at control unit.
 - Power indicator is off.
 - Audible and visible trouble indicators on.
- f) Operate trouble silence switch.
 - Audible trouble sounder silences.
 - Visible trouble indicator stays on
- g) Restore normal power.
 - Power indicator on.
 - Audible and visible trouble indicators off.
- h) Battery verification.
 - Batteries dated (optional, but a good practice).
 - Batteries same rating (or larger) as battery calculations in Record of Completion.
 - Battery location recorded at control unit (if located remote from control).
- i) Disconnects battery leads.
 - Audible and visible trouble indicators on.
 - Reconnect batteries.
- j) Initiate an alarm from any device in the system.
 - Alarm sounds.
 - Proper identification of actuated device.
- k) Operate alarm silence or acknowledge switch.
 - Zone light or display stays on.
- l) Initiate another alarm from a device on a different initiating device circuit.
 - Alarm resounds.
- m) Reset devices and operate system reset switch.
 - System resets.
 - Trouble indicators activate until alarm silence switch is returned to normal.

9.3 Field Device Test Preparation

- a) This test normally requires two people: one person at the control unit and the other testing the field devices. Hand-held radios provide an efficient means of communication.
- b) The person in the field performs a test. The person at the control unit notifies the person performing the test what occurred. Record result.
- c) All devices must be tested for alarm or supervisory function and indication verified at the control unit and all remote annunciators.

9.4 Monitoring for Integrity Tests (often referred to as circuit supervision)

9.4.1 Class “A” Wiring

- a) Remove an initiating device (pull station, smoke detector, etc.) and disconnect both incoming wires (there should be 4 wires connected to the device).
 - Audible and visible trouble indicators on.
- b) Actuate the device.
 - Alarms sound.
 - Zoning identification verified.
- c) Reset the operated device and system.
- d) Replace those two wires and disconnect the two outgoing wires.
- e) Actuate the device.
 - Alarms sound.
- f) Reconnect wires,
- g) Connect one side of the device circuit to ground using a jumper wire.
 - Visible and audible signal at control unit
- h) Actuate the device.
 - Alarms sound.
- i) Reset device, if required, and system.
- j) Repeat “ground” test for other side of the device circuit.

- k) Re-install the device and reset system.

- l) Repeat wiring supervision test for each IDC, SLC, and NAC.

9.4.2 Class “B” Wiring

- a) Remove an initiating device (pull station, smoke detector, etc.) and open the circuit by disconnecting one wire (there should be 4 wires connected to each device on the circuit, except for the end-of-line device—2 wires and end-of-line device).
Note: Removing a detector from its base will open the circuit and cause a trouble signal.
 - Audible and visible trouble indicators on.
- b) Reconnect the wire.
- c) Reset the system.
- d) Connect one side of the device circuit to ground using a jumper wire.
 - Audible and visible indicators on
- e) Reset the device.
- f) Repeat ground test for other side of the device circuit.
- g) Reinstall the device.
- h) Repeat wiring supervision test for IDC, SLC, and NAC.

9.5 Device Tests

9.5.1 Manual Fire Alarm Boxes (Pull Stations)

- a) Actuate a pull station.
 - Alarms sound.
 - Zoning identification verified.
- b) Repeat for each manual pull station in the system.

9.5.2 Smoke Detectors, Spot-type

- a) Actuate a smoke detector using smoke or aerosol acceptable to the manufacturer. Do not test with magnets.
 - Alarm sounds.

- Zoning identification verified.
- b) Reset system.
 - System returns to normal standby condition.
- c) Repeat smoke test for each smoke detector in system.

9.5.3 Smoke Detectors, Beam

- a) Follow the manufacturers recommended test methods. Typically, these tests use a screen filter set for specific devices.

9.5.4 Smoke Detectors, Air Sampling

- a) Follow the manufacturers recommended test methods.

9.5.6 Non-Restorable Fixed Temperature Heat Detector

- a) Remove the device from its mounting plate and short across the alarm contacts.
 - Alarm sounds.
 - Zoning identification verified.
- b) Replace device.
- c) Repeat for each non-restorable heat detector in system.

9.5.7 Restorable Fixed Temperature Heat Detector

- a) Heat test using a hair dryer or approved heat detector tester.
 - Alarms sound.
 - Zoning identification verified.
- b) Acceptance/Re-acceptance Tests – Repeat tests for each restorable heat detector in system.
- c) Periodic Tests -Test 20% of restorable fixed temperature heat detectors. Be sure to log which detectors have been tested.

9.5.8 Rate of Rise Heat Detector

- a) Heat test using a hair dryer or approved heat detector tester.

- Alarm sounds.
- Zoning identification verified.

- b) Repeat for each rate-of-rise heat detector in system.

9.5.8 Rate Compensation Heat Detector

- a) Heat test using a hair dryer or approved heat detector tester.
 - Alarm sounds.
 - Zoning identification verified.
- b) Repeat for each rate compensation heat detector in system.

9.5.9 Restorable Line-Type Heat Detector

- a) Heat test using a hair dryer or approved heat detector tester.
 - Alarm sounds.
 - Zoning identification verified.
- b) Repeat for each restorable heat detector in system.

9.5.10 Non-Restorable Line-Type Heat Detector

- a) Short across the conductors at the end of the heat detector cable.
 - Alarm sounds.
 - Zoning identification verified.
- b) Repeat for each non-restorable line-type heat detector in system.

9.5.11 Flame Detectors

- a) Follow the manufacturer's recommended test methods.

9.5.12 Waterflow Switches

- a) Open the Inspector's Test Valve and flow water.
 - Alarms sound within 90 seconds. (Time delay should be as short as possible. Adjust to avoid possible nuisance alarms due to pressure variations, surges, etc.)
- b) Repeat for each waterflow switch in system.

9.5.13 Pressure-type Waterflow Device (Alarm)

- a) Operate the alarm test bypass connection.
 - Alarms sound.
- b) Repeat for each pressure-type waterflow switch in system.

9.5.14 High or Low Pressure Switch (Supervisory)

- a) Operate the switch.
 - Supervisory signal is received when pressure increases or decreases by 70 kPa (10 psi).
 - Restoration of signal is received when pressure is back within 70 kPa (10 psi) of required pressure.
- b) Repeat for each supervisory pressure switch in system.

9.5.15 Room Temperature Switch (Supervisory)

- a) Operate the switch.
 - Supervisory signal is received when temperature is decreased to 4.4°C (40°F).
 - Restoration of signal is received when temperature is returned to above 4.4°C (40°F).
- b) Repeat for each room temperature switch in system.

9.5.16 Water Temperature Switch (Supervisory)

- a) Operate the switch.
 - Supervisory signal is received when temperature is decreased to 4.4°C (40°F).
 - Restoration of signal is received when temperature is returned to above 4.4°C (40°F).
- b) Repeat for each water temperature switch in the system.

9.5.16 Water Level Switch (Supervisory)

- a) Operate the switch.
 - Pressure Tank – Supervisory signal is received when water level increases or decreases 100 mm (3 in.) from the required level.

- Non-pressure Tank- supervisory signal is received when water levels falls 300 mm (12 in.) from the required level.
- Restoration of signals is received when water levels are returned to normal levels.

9.5.17 Gate Valve Supervisory Switch

- a) Turn valve toward closed position.
 - Supervisory signal within two revolutions.
- b) Turn valve to full open position.
 - Supervisory signal restores.
- c) Repeat for gate valve supervisory switches in system.

9.5.18 Post Indicator Valve Supervisory Switch

- a) Turn valve toward closed position.
 - Supervisory signal within two revolutions.
- b) Turn valve to full open position.
 - Supervisory signal restores.
- c) Repeat for all other post indicator supervisory valves in system.

9.5.19 Other Supervisory Switches Type of Device

- a) Operate device as appropriate.
 - Supervisory signal received.
- b) Return device to normal position.
 - Supervisory signal restores.
- c) Repeat for all other supervisory switches in system.

9.5.20 Audible Notification Appliances—General Alarm—Public Mode

- a) Place system in alarm condition.
- b) Using a Sound Level Meter, verify sound level in all occupied spaces is 15 dBA above average ambient sound level or 5 dBA above maximum sound level lasting more than 60 seconds. (For sleeping rooms, 15 dBA over average ambient, 5 dBA over maximum lasting more than 60 seconds or 70 dBA, whichever is greater, measured at the pillow level.)

9.5.21 Emergency Voice/Alarm Communications Systems

- a) Verify alarm signal in selected areas {fire floor, floor above, floor below, etc.}
- b) Manually place system in general alarm.
- c) Verify alarms sound throughout building.
- 4. Verify each speaker zone for proper operation and identification.
- 5. Verify evacuation tone signals are 15 dBA above average ambient sound level or 5 dBA above maximum sound level lasting at least 60 seconds.
- 6. Verify clarity (intelligibility) of automatic voice message.
- 7. Verify clarity (intelligibility) of live voice signal.

9.5.22 Visible Notification Appliances

- a) Place system in alarm.
- b) Verify proper location, flash rate, and candela rating of each strobe in system.

9.5.23 Two-way Telephone Communications

- a) Using a fire phone portable handset or fire warden station, verify proper operation from each fire phone location.
- b) Verify communications is still understandable with 5 phone jacks plugged in (equivalent to 5 handsets off-hook).

9.5.24 Off-Premises Monitoring

Digital Alarm Communicator Transmitters (DACTs) are the most popular type installed for off-premises signaling. Test the DACT using the following tests. If other methods are used, follow the manufacturer's instructions and NFPA 72, Chapter 7 recommended test methods.

- a) Disconnect one telephone line. DACT should report a trouble condition within 4 minutes.
- b) Reconnect first telephone line. System should return to normal condition.
- c) Disconnect second telephone line. DACT should report a trouble condition within 4 minutes.
- d) Turn DACT primary power breaker off.
- e) Verify trouble condition.
- f) Reconnect DACT primary power.
- g) Disconnect DACT secondary power.
- h) Verify trouble condition.
- i) Reconnect DACT secondary power.
- j) Transmit an alarm for each zone of the DACT
- k) Call monitoring facility to verify receipt of signals and have them place system back in service.

9.6 Finalize Job

- a) Fill out Record of Completion.
- b) Update Drawings of Record.
- c) Instruct owner's representative on system operation. The equipment supplier often provides customer training.
- d) Notify local authority job is ready for inspection and acceptance.

10. Inspect, Test, and Maintain

10.1 Code References

NFPA 72, Chapter 7

Note: The Inspection and Testing Form shown in NFPA 72 as Figure 7-5.2.2 is available from AFAA, P.O. Box 951807, Lake Mary, FL 32795-1807.

10.2 General Procedures

After acceptance by the authority having jurisdiction, the ongoing inspection, testing and maintenance begins. NFPA 72, Chapter 7 contains the requirements. Manufacturer's instructions may provide specific procedures or test equipment required. Local code or other authorities having jurisdiction (insurance, hospital) may have additional requirements.

10.3 Qualifications of Service Personnel

NFPA 72, paragraph 7-1.2.2 identifies examples of personnel qualified to service fire alarm systems:

- 1) Factory trained and certified
- 2) National Institute for Certification in Engineering Technologies fire alarm certified
- 3) International Municipal Signal Association fire alarm certified
- 4) Certified by a state or local authority
- 5) Trained and qualified personnel employed by an organization listed by a national testing laboratory for the servicing of fire alarm systems

10.4 Inspection

NFPA 72 requires periodic visible inspection of fire alarm equipment. Visible inspections ensure that there are no changes that affect equipment perfor-

mance. NFPA 72, Table 7-3.1, Visible Inspection Frequencies, provides the frequency of inspection for the various types of fire alarm equipment.

10.5 Testing

NFPA 72 requires periodic testing of fire alarm equipment. NFPA 72, Table 7-3.2, Testing Frequencies, provides the frequency of tests for the various types of fire alarm equipment. NFPA 72 Table 7-2.2 contains the test methods used in testing the fire alarm system.

10.6 Maintenance

- a) Maintain the fire alarm according to manufacturer's instructions.
- b) Clean the equipment as required by local conditions.

10.7 Records (Inspection, Testing, and Maintenance)

- a) Retain records until the next test and for 1 year thereafter.
- b) Make a permanent record of each test that includes the following, plus all applicable information requested in NFPA 72, Figure 7-5.2.2. (See 10.1 for availability.)
 - 1) Date
 - 2) Test frequency
 - 3) Name of property
 - 4) Address
 - 5) Name of person performing inspection, maintenance, tests, or combination thereof, and affiliation, business address, and telephone number

- 6) Name, address, and representative of approving agency(ies)
- 7) Designation of the detector(s) tested, for example, "Tests performed in accordance with Section _____."
- 8) Functional test of detectors
- 9) Functional test of required sequence of operations
- 10) Check of all smoke detectors
- 11) Loop resistance for all fixed-temperature, line-type heat detectors
- 12) Other tests as required by equipment manufacturers
- 13) Other tests as required by the authority having jurisdiction
- 14) Signatures of tester and approved authority representative
- 15) Disposition of problems identified during test (for example, owner notified, problem corrected/successfully retested, device abandoned in place)

10.8 Cautions

- a) Look for changes in building construction during visible inspections, such as, partitions and high cabinets. Look for relocated furnishing that are obstructing the use of or obscuring the view of devices and appliances (e.g., plants placed in front of manual fire alarm boxes).
- b) Test the functionality of smoke detectors using an aerosol, or other method recommended by the manufacturer. Use of a test button or magnet does not verify smoke entry, but can test the internal circuitry.
- c) Test the sensitivity of smoke detectors using methods described in manufacturer's instructions. Addressable analog smoke detector sensitivity may be measured using the listed control unit. Do not use a magnet to test smoke detector sensitivity, unless the manufacturer's instructions indicate the magnet is listed as a prescribed sensitivity test method.

(This appendix is not part of the standard)

Appendix A: Reference Standards

National Fire Protection Association
1 Batterymarch Park
P.O. Box 9101
Quincy, MA 02269-9101
(617) 770-3000
(617) 770-3500 Fax

ANSI/NFPA 72-1999, *National Fire Alarm Code*

ANSI/NFPA 70-1999, *National Electrical Code*

ANSI/NFPA 90A-1999, *Standard for the Installation of Air-Conditioning and Ventilating Systems*

ANSI/NFPA 101-2000, *Life Safety Code*

Institute of Electrical and Electronics Engineers
445 Hoes Lane
P.O. Box 1331
Piscataway, NJ 08855-1331
(800) 678-4333

ANSI/IEEE C2-1997, *National Electrical Safety Code*

Other *National Electrical Installation Standards*[™] published by NECA:

National Electrical Contractors Association
3 Bethesda Metro Center, Suite 1100
Bethesda, MD 20814
(301) 215-4504 tel
(301) 215-4500 fax
www.neca-neis.org

NECA 1-2000, *Practices for Good Workmanship in Electrical Contracting* (ANSI)

NECA 100-1999, *Symbols for Electrical Construction Drawings* (ANSI)

NECA 101-2000, *Standard for Installing Steel Tube (Rigid, IMC, EMT)*

NECA/AA 104-2000, *Recommended Practice for Installing Aluminum Building Wire and Cable* (ANSI)

NECA 202-2001, *Recommended Practice for Installing and Maintaining Industrial Heat Tracing Systems* (ANSI)

NECA/FOA 301-1997, *Standard for Installing and Testing Fiber Optic Cables*

NECA 400-1998, *Recommended Practice for Installing and Maintaining Switchboards* (ANSI)

NECA 402-2000, *Recommended Practice for Installing and Maintaining Motor Control Centers* (ANSI)

NECA 404-2000, *Recommended Practice for Installing Generator Sets* (ANSI)

NECA/EGSA 405-2001, *Recommended Practice for Installing and Commissioning Interconnected Generation Systems* (ANSI)

NECA/IESNA 500-1998, *Recommended Practice for Installing Indoor Commercial Lighting Systems* (ANSI)

NECA/IESNA 501-2000, *Recommended Practice for Installing Exterior Lighting* (ANSI)

NECA/IESNA 502-1999, *Recommended Practice for Installing Industrial Lighting Systems* (ANSI)

NECA/BICSI 568-2001, *Standard for Installing Commercial Building Telecommunications Cabling* (ANSI)



National Electrical
Contractors Association
3 Bethesda Metro Center
Suite 1100
Bethesda, MD 20814
301-657-3110
fax: 301-215-4500
www.neca-neis.org

Standards & Safety
Index: NECA 305
10K/1-02

